I. モデルの概要

本チュートリアルで作成する水平圧力容器のモデルの概要を以下に示します。

○ モデル概要図



単位: mm

ノズル径(左右とも): NPS 20 (Nominal Pipe Size 20 inch)

○ モデルの形状とプロパティ

外径: 1400 mm

タンジェントライン間の距離:6000 mm

タンジェントラインからサドル軸までの距離:500 mm

鏡板

タイプ:楕円形

軸比:2/1

ノズル

マンホール:鏡板の中心に位置

- フランジ:ウェルドネック、SA105
- ノズルネック: シームレス管、SA106GRB

○ 設計パラメータ

評価コード: ASME VIII July 2013 局所荷重の方法: WRC B 107 Attachment: 1979-3 ANSI のフランジと配管を使用 最高使用圧力 (MAWP) に対する確認:不要 ボルトのタイプ: ISO, Pitch 3 mm when > M24; Tensile Stress Area 設計 or 検定:設計

○ 計算条件

容器内部

設計圧力:1 Mpa、設計温度:200 ℃

容器外部

設計圧力:0.103 Mpa、設計温度:150 ℃

液面レベル: 500 mm

腐食代:3mm

保温材厚さ:100 mm

液体の比重:1

○ 運転条件

最低設計金属温度(MDMT): -15 ℃

II. モデルの作成

ステップ1 – 容器のプロパティの設定

- 新規ファイルの作成
 - 1. AutoPIPE Vessel を開き、メニューの File > New を選択します。
 - Specification ダイアログで以下の設定を行い、OK ボタンを押します。
 タイプ: Pressure Vessel
 Current Project Directory: モデルのデータファイルを保存するフォルダ
 Use a Formal Specification: No
 - 3. Pressure Vessel ダイアログで Vessel on Saddles を選択して OK ボタンを押し ます。

F	Pressure Vessel	x
	Vessel on Saddles	
	Cancel	ОК

○ 設計パラメータの設定

"Vessel のプロパティ"ダイアログの Design Parameters タブを開き、パラメータ に以下の値を入力します。その他はデフォルトのままとします。

Code and Standards 枠内

Design Code : ASME VIII July 2013

Local Load Method : WRC B 107 Attachment: 1979-3

Flange Standard : ASME

 $Pipe \ Standard \ \vdots ASME$

Bolt Type: ISO, Pitch 3 mm when > M24; Tensile Stress Area

Design Conditions 枠内

Design を選択

esign Parameters Wind Ea	rthquake Design Conditions Operating Conditions Geometry Report
Code and Standards Design Code Local Load Method Flange Standard Bolt Type	ASME VIII July 2013 WRC B 107 Attachment: 1979-3 Use PED ASME Pipe Standard ASME ISO, Pitch 3 mm when > M24; Tensile stress area
	Browse V Shutdown
Design Conditions MAWP calculation req'd. Apply DIN 18800 Part 4 Check Flange Rigidity Gas Pressure in Vessel Steam Pressure in Vessel External Pressure in Vessel	No Increased Allowables Hydrotest Conditions Apply PD 5500 A.3.6 (20%) Horizontal, Code Pressure Apply ASME UG 23 d (20%) Horizontal, Bottom Pressure Apply UBC 1612.3.2 (33%) Vertical
 With Stiffeners Without Stiffeners Minimum space between Stiff Including Trays Excluding Trays 	
Orientation Reference Clockwise Counter-clockwise 0° Position Tray Numbering	ASME II D Customary ASME II D Metric Specific Gravity 8 Liquid on Trays
Bottom to Top	C Top to Bottom

○ 設計条件の入力

"Vessel のプロパティ" ダイアログの Design Conditions タブを開き、以下の値を 入力します。

Internal 枠内

 $Pressure \ddagger 1 \text{ MPa}$

Design Temperature : 200 °C

Liquid Level in Operation : 500 mm

Corrosion Allowance : 3 mm

External 枠内 Pressure : 0.103 MPa Design Temperature : 150 °C

Insulation 枠内

Insulation Thickness : 100 mm

		1999-1999-1999-1999-1999-1999-1999-199			
Chamber No.		2		Default Values	
Internal	1	14		Safety Factor	
Pressure	1			Ode Values	
Required MAWP	MPa			O User Defined	
Required MAM	200			Vie	:w]
Design Temperature	200			Elangas Supplement	
Liquid level in Operation	500			Service AD Eactor	
Fluid Specific Gravity	1			Service AD Tactor	
Corrosion Allowance	3			AD Factor Test :	-
External				Use ASME Bolt Sp	oace Fact.
Pressure	0,103			Material	
Design Temperature	150			Insulation s	upports
Test				Opening Reinforcem	ent
Pressure	MPa			Stress reserv	ve value
Fluid Specific Gravity	1			1	
Insulation				OTL extension	
Insulation Thickness	100			If Welded Tubes	-
Weight by Volume	35 kg/m ³				L
Characteristics				Friction Factor for B	olt Torque
Radiography UW11 Spo	ot (b) 🔻 🔻		· ·	Thread	0.12
Weld Type	oe 1 🔻	-	-	Nut Seating Area	0.12

○ 運転条件の入力

"Vessel のプロパティ" ダイアログの Operating Conditions タブを開き、パラメ ータに以下の値を入力します。

MDMT Requested : -15 $\,\,^\circ\!\mathrm{C}$

esign Parameters	Wind	Earthquake	Design Conditions	Operating Conditions	Geometry	Report	Materials
Chamber No.							
			1	2			3
Internal		1	10		12		
Pressure		MPa					
Design Temperat	ure	°C					
Eluid Name					î		
		-					
Service Name			•				Ť
External							
Pressure		MPa					
Design Temperat	ure	°C					
				·			
MDMT				1 m	9.1		
Requested		-15				10	12
		Use	: UG-20(f)	Use UG-20(f)		Use UG-	20(f)
UCS66 / 3.11.2.	5	App	ly Reduction	Apply Reduction	1	Apply Re	eduction
-UG-20(f) - Ma:	kimum th	ickness for imp	act test exemption		1.11		
Curve A	1	3 mm C	urve B 25 mm	Curve C 25 n	im C	urve D	25 mm
PWHT		15		3	74		
Requested		Yes Yes		Yes	1	Yes	
Creep and Fatig	ue						
Creep Apply		Yes		Yes		Yes	
Fatigue Apply		Tes Yes		Yes		Yes	

○ レポートの設定

"Vessel のプロパティ" ダイアログの Report タブを開き、パラメータに以下の値 を入力します。

Style 枠内

Language : EN - English

Unit System : SI

Edit Test Condition にチェック

esign P	arameters	Wind	Earthquake	Design Con	ditions	Operat	ing Condi	tions Geometry R	eport Materials
		Repo	ort Content - Dr	ag for orderi	ng		Ĩ	Style	
Inp Ma Inf Bo Bo Bo Tu Bo Tu Bu Bu	out data list terial Specific roduction besheet Layo dy Componen dy Componen dy Flange and besheet and B ndle Compone	ation ut ts Und ts Und d Cove Bellow ents un	er Internal Pres er External Pre , der Int./Ext. Pr	isure ssure ressure				Language Unit System Edit Test Condit Wind and Eartho Report Det	EN - English SI juake ermining Case Only d Report
Vib MA Op Su	ration Period, WP ening Reinfor pport (Anchor	cemen , Legs	Wind, Earthqua t , Brackets) III	ake, Stresses	, Saddle	S	•	Vessel Identification Job Tag Job Name	1
		Res	et Report Cont	ent to Defau	t				
G:		1,000	Revision H	istory				Vessel Tag	
Rev.	Date	De	scription	Aut.	Chk.	App.	QA	Description	
	15-01-22							Drawing No	
0.0									
<			111				· ·		

○ 材料の設定

"Vessel のプロパティ" ダイアログの Materials タブを開き、Apply Default Data ボタンを押して、Barrel、Flange、Bolting、Skirt/Supportsの材料をデフォルト値 に設定します。

	neters Wind E	arthquake	Design Conditions Op	erating Conditions Ge	ometry	Report Materials
	Origin		Class	Norm		Symbolic Name
Body						
Barrel	Plate	•	Carbon Steel 🔹 🔻	ASME II	•	SA516GR60 -
Flange	Forging	•	Carbon Steel 🔹 🔻	ASME II	•	SA105
Bolting	Bolting	•	Carbon Steel 🔹	ASME II	•	SA 193GRB7 -
Chiet / Com	norta					
skirt / sup	ports			1		
	Plate	•	Carbon Steel	ASME II	•	SA516GR60 •
P 1				Mal	e-Female	e Semi-Confined 🔹
Ţ	Integral with hub		-	Sm	aath	
	Integral with hub	1		Smo	ooth	•
	Integral with hub	1	,•	Sma 1 ->Elastomer (ru	ooth bber) sh	▼ Nore durometer <75
	Integral with hub soft Flat	rubber) sh	nore durometer <75	I ->Elastomer (ru	ooth bber) sh	▼ nore durometer <75
	Integral with hub Soft Flat Elastomer (Elastomer (rubber) sh	nore durometer <75	Smr 1 ->Elastomer (ru	ooth bber) sh	vore durometer <75
	Integral with hub Soft Flat Elastomer (Elastomer (Elastomer (Elastomer (Elastomer (Elastomer (rubber) sh rubber) sh rubber) + 2 mm)	nore durometer <75 nore durometer >75 cotton fabric insertion	1 ->Elastomer (ru	ooth bber) sh	vore durometer <75
	Soft Flat Elastomer (Elastomer (Elastom	rubber) sh rubber) sh rubber) + 2 mm) 2TEE	nore durometer <75 nore durometer >75 cotton fabric insertion	I ->Elastomer (ru	ooth bber) sh	▼ Nore durometer <75

○ 容器形状の設定

"Vessel のプロパティ" ダイアログの Geometry タブを開き、以下の設定を行います。



Main Vessel 枠内

Diameter : External, 1400 mm

Distance Between Tangent Lines : 6000 mm

Distance from Tangent Line to Saddle CL: 500 mm

Head Type : Elliptical Head

Axis Ratio : 2/1

Supplementary Design Data 枠内 Maximum Plate Width を選択 Width Value : 2000 mm Distance Between Welds : 50 mm Collision Check にチェック

esign Parameters	Wind	Earthquake	Design Conditions	Operating Conditions	Geometry Rep	port Materials
Main Vessel Diameter Distance between Distance from Tan Head Type Axis Ratio	Tangent gent Line	External Internal : Lines e to Saddle CL (1400 mm 6000 mm 500 mm Elliptical head 2/1	 Thickness Uppe Uppe Uppe Uppe Trad Trad Trad Thickness Head 	e round-up er mm (1/16 in) er 1/10 mm (1/32 in er 1/100 mm (1/64 i e Carbon Steel Thi e Stainless Steel Th s Alignment ds and Shells	i) in) ckness nickness
Nozzles Rounded Up Dist. Dist. Insulation / F	=lange / lange	Axis	5 mm 75 mm	Nozzle or © Norm @ Flang	n Top Head nal Projection ges Aligned	
Supplementary De Maximum Plat User Plate Wid	sign Dat e Width dth	a Width Va	alue 2000 mm	Distance Bet	ween Welds Check	50 mm
Second and Third	Chamber	-				
Length						
Location						

Supplementary Design Data 枠内の設定により、溶接線間距離 50mm に対して、部 品溶接線の干渉チェックが行われます。

ここまでの設定が終わったら、OKボタンを押して"Vessel のプロパティ"ダイアロ グを閉じます。

○ データの保存

メニューの File > Save As を選択して "Save As" ダイアログを開き、適当なファイ ル名 (ここでは TutorialModel1 とします) を入力後に Save ボタンを押してデータ をファイルに保存します。

ステップ2 – ノズルの追加

○ ノズルの追加

1. ツールバーにあるノズルボタンをクリックします。



2. "Nozzle のプロパティ"ダイアログの Nozzle Neck タブを開き、容器左側のノズ ル用のマンホールを追加します。以下のパラメータの入力を行います。



Nozzle Type 枠内 Nozzle Type : Manhole

Identification 枠内 Tag:M Designation:Manhole Characteristics 枠内 Pipe Standard : ASME Diameter : Nominal, NPS 20

Location 枠内 Location:-100 mm

Location に 0 未満を入力すると、マンホールが左側の鏡板上に位置すると見なされます。

- "Nozzle のプロパティ"ダイアログの Standard Flange タブを開き、以下のパラ メータの入力を行います。
 Flange : With Flange
 Flange Standard : ASME
 Type : Welding Neck WN
 Nominal Diameter : 20
- Apply Default Material 枠内で以下の設定を行います。 CS/CS ASME VIII div 1 を選択 Nozzle Flange を選択 Apply Default Data ボタンをクリック

これにより、読み取り専用フィールドの Flange Rating に値が設定されます。

Flange With Flan	nge Welded				`	
Without I	lange	(1000)	Flange Standard	ASME		•
Product		K WN	Symbolic Name	SA105		
Class	lass Carbon Steel		Numeric Name/UNS No.	K03504		
Class Carbon Steel			Numeric Name/UNS No.	1		
	ME Section II Part D Note C)	Chamber No.	1 MD-	1 *	
Material N	Normalized		Pesign Temperature	200 90		
Produced	to Fine Grain Practice		Specific Cravity	7 950	User Defined	-
Use UG-2	10(f)		Specific Gravity	7.850	Oser Denned	
Apply Def	ault Material		Temperature			
CS/CS AS	SME VIII div 1 🔹	Nozzle Flar	nge 🔹	A	pply Default Data	
Rating			Option			_
150		•	Facing	Finish		Ť
Bolting	ISO) UNC			
Miscellan	eous					
	535.0		Gasket			

 "Nozzle のプロパティ"ダイアログの Material タブを開き、Apply Default Material 枠内で以下の設定を行います。 CS/CS ASME VIII div 1 を選択 Nozzle Neck を選択 Apply Default Data ボタンをクリック

Material R	lequest						
Product	Seamless Pip	e	🔹 Symb	oolic Name	SA 106GRB		•
Class	Carbon Stee	l	▼ Nume	eric Name/UNS No.	K03006		•
Norm	ASME II		Cham	nber No.	1 •		
Mater	ial Normalized ced to Fine Grain Pra Default Material	ictice		Use UG-20(f)	Tempe	erature	
CS/CS	A CRAFT LITTE JC. A						
Constants	S ASME VIII DIV I	▼ Nozz	le Neck	•	Apply	Default Data	
Properties	s at 200 °C - 0.00 mm	n Database	le Neck	•) -	Apply	Default Data	User
Properties Ambient A	s at 200 °C - 0.00 mm	Nozz Database 118. MPa	le Neck User MPa	Test/Except. Amb	Apply	Default Data Database 216.9 MPa	User
Properties Ambient A Allowable :	s at 200 ℃ - 0.00 mm llowable Stress stress at Temp.	Nozz	User MPa MPa	Test/Except. Amb. Test/Ex. Allow. St	Apply . Allow. Stress ress at Temp	Default Data Database 216.9 MPa 186.3 MPa	User MPa MPa
Properties Ambient A Allowable s Ambient Yi	s at 200 °C - 0.00 mm llowable Stress stress at Temp. ield stress	Nozz Database 118. MPa 118. MPa 241. MPa	le Neck User MPa MPa MPa	Test/Except. Amb. Test/Ex. Allow. St Ambient Modulus c	Apply . Allow. Stress ress at Temp of Elasticity	Default Data Database 216.9 MPa 186.3 MPa 200350. MPi	User MPa MPa MPa
Properties Ambient A Allowable s Ambient Yi Yield stres	s ASME VIII div 1 s at 200 ℃ - 0.00 mm llowable Stress stress at Temp. ield stress s at Temp.	 Nozz Database 118. MPa 118. MPa 241. MPa 207. MPa 	User MPa MPa MPa MPa	Test/Except. Amb Test/Ex. Allow. St Ambient Modulus of Modulus of Elastici	Apply , Allow, Stress ress at Temp of Elasticity ty at Temp,	Default Data Database 216.9 MPa 186.3 MPa 200350. MPi 190000. MPi	User MPa MPa MPa MPa
Properties Ambient A Allowable : Ambient Yi Yield stres Specific Gr	s ASME VIII div 1 s at 200 °C - 0.00 mm llowable Stress stress at Temp, ield stress s at Temp, ravity	 Nozz Database 118. MPa 118. MPa 241. MPa 207. MPa 7.850 	User MPa MPa MPa MPa	Test/Except. Amb. Test/Ex. Allow. St Ambient Modulus of Modulus of Elastici Ambient Tensile St	Apply Allow. Stress ress at Temp of Elasticity ty at Temp. rength	Default Data Database 216.9 MPa 186.3 MPa 200350, MPi 190000, MPi 414, MPa	User MPa MPa MPa MPa MPa
Properties Ambient A Allowable s Ambient Yi Yield stres Specific Gr Thermal Es	s ASME VIII div 1 s at 200 °C - 0.00 mm llowable Stress stress at Temp. ield stress s at Temp. avity xpansion	 Nozz Database 118. MPa 118. MPa 241. MPa 207. MPa 7.850 2.281 mm/m 	le Neck User MPa MPa MPa MPa mm/m	Test/Except. Amb Test/Ex. Allow. St Ambient Modulus of Modulus of Elastici Ambient Tensile St Tensile Strength @	Apply Allow. Stress ress at Temp of Elasticity ty at Temp. rength PTemp.	Default Data Database 216.9 MPa 186.3 MPa 200350, MPi 190000, MPi 414, MPa 414, MPa	User MPa MPa MPa MPa MPa MPa
Properties Ambient A Allowable s Ambient Yi Yield stres Specific Gr Thermal Es Curve	s ASME VIII div 1 s at 200 °C - 0.00 mm llowable Stress stress at Temp, ield stress s at Temp, ravity xpansion CS-2	 Nozz Database 118. MPa 118. MPa 241. MPa 207. MPa 7.850 2.281 mm/m 	le Neck User MPa MPa MPa MPa mm/m	Test/Except. Amb. Test/Ex. Allow. Str Ambient Modulus of Modulus of Elastici Ambient Tensile St Tensile Strength @	Apply Allow. Stress ress at Temp of Elasticity ty at Temp. trength Temp.	Default Data Database 216.9 MPa 186.3 MPa 200350. MPi 190000. MPi 414. MPa 414. MPa	User MPa MPa MPa MPa MPa MPa

6. OK ボタンを押して Nozzle のプロパティダイアログを閉じます。 画面上で容器の左側にノズルが追加されたことを確認します。



1. 上記で作成したノズルをコピーして右側のノズルを作成します。
 まず、画面の左側に表示されている Component 下で作成済みのノズルを選択しておきます。その状態でスケッチ画面(sketcher)内でマウスを右クリックしてショートカットメニューを出し、Insert a copy を選びます。



8. 開いた "Nozzle のプロパティ"ダイアログの Nozzle Neck タブで以下の二点を 修正します。

Identification 枠内

Tag:M2

Location 枠内

Location: 7000 mm

ozzle Neck Standard Flange Material	Pad Material Bolt Mate	erial		
Nozzle Type Process Shell Inlet Manhole Shell Outle With Blind Flange Tubeside ir Instrument Tubeside C	Identii Tag t Desigr ulet Desigr	fication	12 Manhole	
Characteristics Pipe Standard ASME SS Diameter Nominal External Internal Schedule mm	Reinforcement Size Width Thickne Angle	mm ess mm [B]	Reinforcement With or Without R-Pa Long Welding Neck Butt Welded Self Reinforcing Tee 100%	ad
User Defined	Weld Size Nozzle to Pad	mm	Nozz. mm Shell	mm
Tolerance mm	Pad to Shell	mm	Corrosion Allowance	mm
weid joint endency	Involution Conten		Insulation Thickness	mm
Location Vessel Boot Nozzles Location 7000 mm Offset mm Orientation Indination Nozzles	Projection Extern D P P P C Se © Se	al [D]	Goose Radius Orientation Location [L]	

9. OK ボタンを押して "Nozzle のプロパティ"ダイアログを閉じます。 画面上で容器の右側にノズルが追加されたことを確認します。



- サドルの設定
 - 1. 画面に表示されるサドルをダブルクリックして "Support のプロパティ" ダイア ログを表示します。



2. Saddles タブで以下の設定を行います。

Design Method : ASME VIII div 2 Selected Standard : APVessel

Design Method Selected Standard	ASM	E VIII div 2 essel		💌 🔳 ap	ply effective a	angle acc. T	TEMA 8th E	d. RGP
Dist mm Stiffr	ness da <mark>N/n</mark>	nm		$\overline{\Lambda}$	· _ · - ·	$\overline{\mathbf{X}}$	2	╴╴ <u></u> Ĕ
500 0	icas dal m	inte			8	1 T	1	¥ 🚽
5000 0			1		Ŧ	, i		У У
	1.122			$\square \bigcirc$				<u>ک</u>
•	<u></u>		DE	щ.		D I		╕╁╒╇╇
Elevation		mm		-	····	c I	L [™] •¦ •	G
Friction Factor		0.3				ଁ <mark>ଚ</mark>		E
110202000000000000000000000000000000000	-	1.44	EXE					
Drawing No								EXF = (
Drawing No	0	Welded	<u>EXF</u>			<u> </u>	1	EXF = (EXA = (2 Bolts
Drawing No Right Anchored Left Anchored 	© @	Welded Loose	<u>EXF</u>					EXF = (EXA =) 2 Bolts
Drawing No Right Anchored Left Anchored Saddle definition	© @	Welded Loose						EXF = (EXA = (2 Bolts
Drawing No Right Anchored Left Anchored Saddle definition Saddle No 1 Base Plate 	Type	Welded Loose	EXF <u>EXA</u> <u>G</u> <u>E</u> Height/Axis [HS] Ribs		Angle [T]	120 ° W	/eight	EXF = 1 EXA = 1 2 Bolts
Drawing No Right Anchored Left Anchored Saddle definition Saddle No Base Plate Width [E]	Type	Welded Loose	Height/Axis [HS] Ribs Thickness [K]	++++++++++++++++++++++++++++++++++++++	Angle [T] Wear Plate Width [F]	120 ° W	r Thk.	EXF = (EXA = (2 Bolts 163 Kg
Drawing No Criming No Right Anchored Left Anchored Saddle definition Saddle No Base Plate Width [E] Length [B]	Type	Welded Loose	EXF EXA G E Height/Axis [HS] Ribs Thickness [K] Distance [D]	+ 11 11 mm 14 mm 340 mm	Angle [T] Wear Plate Width [F] Ext. [V]	120 ° W 250 m 75 mm	r Thk.	EXF = (EXA = 1 2 Bolts 163 Kg 14 mm
Drawing No Right Anchored Left Anchored Saddle definition Saddle No Base Plate Width [E] Length [B] Dist. Edge to Web [E] 	Type	Welded Loose 250 mm 1240 mm 110 mm	EXF EXA G E E Height/Axis [HS] Ribs Thickness [K] Distance [D] Quantity	mm 14 mm 340 mm 2	Angle [T] Wear Plate Width [F] Ext. [V] Bolting	120 ° W 250 mr 75 mm	reight Thk. EXF :	EXF = (EXA =) 2 Bolts
Drawing No Right Anchored Left Anchored Saddle definition Saddle No Base Plate Width [E] Length [B] Dist. Edge to Web [E Thickness / Gap [L1] 	Type XV]	Welded Loose 250 mm 1240 mm 110 mm 16 mm	EXF EXA <u>G</u> EXA <u>G</u> EXA <u>B</u> EXA <u>B</u> EXA <u>B</u> EXA <u>B</u> EXA <u>B</u> EXA <u>B</u> <u>B</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u>	++++++++++++++++++++++++++++++++++++++	Angle [T] Wear Plate Width [F] Ext. [V] Bolting [ISO, Roo	120 ° W 250 m 75 mm	reight Thk. EXF :	EXF = (EXA = (2 Bolts 163 Kg 14 mm
Drawing No Right Anchored Left Anchored Saddle definition Saddle No Base Plate Width [E] Length [B] Dist. Edge to Web [E Thickness / Gap [L1] Distance axis / bolt [Type (C)	Welded Loose 250 mm 1240 mm 110 mm 16 mm 580 mm	EXF EXA G E E Height/Axis [HS] Ribs Thickness [K] Distance [D] Quantity Web	14 mm 14 mm 2	Angle [T] Wear Plate Width [F] Ext. [V] Bolting [ISO, Roo	120 ° W 250 mr 75 mm ot Area	eight Thk. EXF :	EXF = C EXA = C 2 Bolts 163 Kg 14 mm mm Stress
Drawing No Right Anchored Left Anchored Saddle definition Saddle No Base Plate Width [E] Length [B] Dist. Edge to Web [I Thickness / Gap [L1] Distance axis / bolt [Bolt(s) Distance [G] 	© © Type :xv] C] [130 mm	Welded Loose 250 mm 1240 mm 110 mm 16 mm 580 mm C1:	EXF EXA G E A B B B B B B B B B B B B B	++++++++++++++++++++++++++++++++++++++	Angle [T] Wear Plate Width [F] Ext. [V] Bolting [ISO, Roo	120 ° W 250 mm 75 mm ot Area	reight Thk. EXF:	EXF = (EXA = 1 2 Bolts 163 Kg 14 mm mm Stress 100 MPa
Drawing No Right Anchored Left Anchored Saddle definition Saddle No Base Plate Width [E] Length [B] Dist. Edge to Web [E Thickness / Gap [L1] Distance axis / bolt [Bolt(s) Distance [G] Bolthole Diameter 	© © Type SXV] (] 130 mm 30 mm	Welded Loose 250 mm 1240 mm 110 mm 16 mm 580 mm C1: x	EXF EXA <u>G</u> EXA <u>G</u> EXA <u>B</u> EXA <u>B</u> EXA <u>C</u> EXA <u>C</u> EXA <u>C</u> EXA <u>C</u> EXA <u>C</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u> <u>C</u>	++++++++++++++++++++++++++++++++++++++	Angle [T] Wear Plate Width [F] Ext. [V] Bolting [ISO, Roo Diam. Quantity	120 ° W 250 m 75 m ot Area	reight Thk. EXF : Allowable Normal Ext./Test	EXF = 1 EXA = 1 2 Bolts 163 Kg 14 mm mm Stress 100 MPa 170 MPa

サドルの形状をユーザが手動で入力したい場合は、Selected Standard フィール ドで User Defined を選択します。

3. Lifting accessories タブで以下の設定を行います。 Local Load Method : WRC B 107 Attachment: 1979-3 Type : Lugs A

occir codd i ric drod		WRC B 107 Attachment: 1979	-3 🔻	Lugs A	
ocation		Size	2	Tailing Lug	
Distance / TL 1st	500 mm	Diameter [Dia]		Distance / TL	
Dist. Apart	5000 mm	Length [L]	200 mm	Orientation 1	
Orientation 1	270 °	Thickness [T]		Orientation 2	
Orientation 2	0	Thickness [TLE]	12 mm	Hole Location [d]	
Lift Methed		Height [H]	120 mm	Hole Diameter [O]	
Image: With the second seco		Hole Location [d]	70 mm	Thickness [T] F]	
Angle [A]		Hole Location [d2]	70 mm	Length [L]	-
Angle [B]	0	Gusset Offset OF	mm	Wear Plate	
جلب هرار	-0-	Current Thidmans M		Length	
	d l	Gusset mickness [K]	mm	Width	
	atta	Hole Diameter [O]	30 mm	Thickness	1
मा मा	ĮI.		+		
	T.	में ि में वा			
			\frown		
	1 Sect	Wear Plate		PD	
		Circular (0)	Rectangular		
A A	*/11	Length / Diam. [PD]	200 mm	Loading Factor	
	10 3	Width / Rib Width	100 mm	110	
and the state of the second	er for and	Thickness	10 mm	Material	
State of the second second	and the second se		11 II		
SIL.		Width / Rib Width Thickness	100 mm 10 mm	Loading Factor 1.5 Material	

Location 枠内 Distance / TL 1st : 500 mm Distance Apart : 5000 mm Orientation 1 : 270° Use Spreader Beam にチェック Size 枠内 Length [L]: 200 mm Thickness [TLE]: 12 mm Height [H]: 120 mm Hole Location [d]: 70 mm Hole Location [d2]: 70 mm Hole Diameter [O]: 30 mm

Wear Plate 枠内 Rectangular を選択 Length / Diameter [PD] : 200 mm Width / Rib Width : 100 mm Thickness : 10 mm

4. Lifting accessories タブの Material ボタンを押して Material ダイアログを表示させ、以下の設定を行います。



Material Reque	st			
Product	•	Symbolic Name		-
Class		Numeric Name/UNS No.		•
Norm	•	Chamber No.	1 -	
Apply ASME	Section II Part D Note G5			
Material Nor	malized	Impact tested	Temperature	
Produced to	Fine Grain Practice	Use UG-20(f)		
Apply Defau	lt Material			
	E VIII div 1 👻 Shell	•	Apply Default Data	

Apply Default Material 枠内 CS/CS ASME VIII div 1 を選択 Shell を選択 Apply Default Data ボタンをクリック

5. OK ボタンを押して Material ダイアログを閉じます。続いて "Support のプロパ ティ"ダイアログも OK ボタンを押して閉じます。

吊り上げ部品は、スケッチ画面 (sketcher) には表示されません。3D レンダリン グビューのみに表示されます。



6. メニューの File > Save を選択して (またはツールバーにある Save the Item File ボタンをクリックして)、これまでに作成したデータを保存します。



III. 計算の実行

- 強度計算
 - 1. ツールバーにある Strength Calculation ボタンをクリックします。



計算実行中であることを示すダイアログが表示されます。



計算が終了すると、3D レンダリングビュー内の容器が赤色で表示されます。



2. 詳細な計算結果を見る前に、左下にあるウィンドウのツリービュー機能を使用して、 主な結果を容易に確認することができます。

	nnonont	9 Ø	Docia
Lor	nponent	1	Desig
-U-	Elliptical head	3	неаа
-0-	Elliptical head	3	Head
Ŧ	Liquid Level	144	
Ψ.	Nozzles	м	Manh
	Nozzles	M2	Manh
山	Saddles		
ţ,	Saddles		
T	Shell	3	Barre
	ITT 合 Item Rest 書 Geometry 富 Nozzles	ults :	

3. ツリーを選択して表示されるウィンドウ上の Show Selected Report Calculation Detail ボタンを押すと、選択箇所だけに対応したレポートが表示されます。

Tag mm	Ext. Diam.	Length	Thickness	Pad Width	Pad Thic	Self Height	Self Thic	Class
🐨 М1	508.0000	435.0000	6.350000	230.0000	10.00000			0
🖶 M2	508.0000	435.0000	6.350000	230.0000	10.00000			150
Show Selected Report Calculation Detail								

IV. 結果の確認

- 詳細な計算結果の表示
 - 1. ツールバーにある View Calculation Result ボタンをクリックします。

	×

- 2. 表示された結果を確認した後、ドキュメントを閉じます。
- 3. AutoPIPE Vessel メニューの File > Save を選択してデータを保存します。

- 図面の表示
 - 1. ツールバーにある Drawing Generation ボタンをクリックします。

2. Drawing ダイアログが表示されます。希望する描画フォームのタイプと言語を選択 します。

Original		
Setting Plan and Initial Flan	lat View	Drawing No
Component Drawings		
Generic File Name	C:¥Users¥Public¥	¥Documents¥AutoPIPE Vessel¥Examples¥VesselData
Select Overplot		-
Add to Original		
O Add Nozzle Evolution		Add Gusset Evolution
Add Nozzle Orientation		Add Gussets
Bill of Material		
Choose Original		
uild-up		
anguage	EN - English	Display
ont Name	Arial	Tangent Lines
	HID	Welding Lines
Inits	MPa, Deg C, Kg	Shell Dimensions
Init System	mm	All Tubes Shown in Layout
ormat 🚺	A0 🗸	Nozzies P1, 11
Dimensions According to T	EMA	
Create Excel Nozzie Table		A -1
) First Angle Projection		

エクセルにエクスポートしたい場合は、Create Excel Nozzle Table にチェックを付けます。

3. Drawing ダイアログの OK ボタンを押します。

描画作成中であることを示す以下のダイアログが表示されます。



4. メニューの Execute > View Drawing を選択して CAD ソフトを起動します。下記 は、CAD ソフトとして MicroStation が選ばれている場合に表示される MicroStation DGN ビューワです。

Project Explorer «	👌 🚽 🛠 🔛 🔤 🔤 🔛 🍓 📈 Create Markup	
Models Views 3 Items Default View 3 Items View 0, v View 0		
< <u> </u>		

使用する CAD ソフトの選択は、メニューの File > Preference を選択して開く "Preference のプロパティ"ダイアログの CAD Software Name で指定することが できます。

- BOM (部品表) と見積り
 - 1. ツールバーにある Cost Estimation Bill of Materials ボタンをクリックします。

\$	
w	

AutoPIPE Vessel (Microprotol) Estimate ダイアログが開きます。



2. AutoPIPE Vessel (Microprotol) Estimate ダイアログの Create a New Item File ボタンをクリックします。

	_	-		
			ц,	
	-	-	-	

3. Bill of Material ダイアログで From existing AutoPIPE Vessel file (emvd) を選 択して OK ボタンを押します。

Bill of Material	×
 From existing AutoPIPE Vessel file (emvd Manually from scratch 	
Cancel	ОК

4. "開く"ダイアログで TutorialModel1.emvd を選択して、開くボタンを押します。



5. AutoPIPE Vessel (Microprotol) Estimate ダイアログ内に BOM が与えられます。 この BOM にはモデル内の部品と部品サイズが含まれています。

AutoPIPE Vessel (Microprotol) Estimate			
D 🗁 🗐 🤊 🗹 🕑 🞯 🏶 🍳 🛠 🖿			
Components code list		Bill o	f Material
Coveral data for actimate 1000 Bundle 1001 Bundle 1005 Doumny Tubes 201 Stationary Tubesheet 2001 Stationary Tubesheet 2011 Stationary Tubesheet 2021 Stationary Tubesheet 2031 Stationary Tubesheet 2031 Stationary Tubesheet 2031 Support Tubesheet 2031 The Rods 2031 The Rods		Overall del Norzestimite 3000 Shellofe 31.05 Barrel 31.05 Barrel 31.05 Barrel 30.01 Head 30.05 Barrel 30.01 Head 30.01 Head 30.01 Head 30.01 Head 30.01 Head M Procest M Procest M Nozzle NeckM M2 Suport 35.01 Stiftner 40.01 Bottine 40.01 Bottine 40.01 Gaskets 60.01 Gaskets 60.01 Gaskets 80.01 Test 80.01 Test 80.01 Test 80.01 Test <tr< th=""><th></th></tr<>	
Unit System SI Job Tag		Date	29/01/2015
Company name Item Tar	16 Gate	Type	Cription Prosecute Versel
Requisition number Author		Quantity	1
ок			NameC:¥tmngWorkDirec¥Aua¥TutorialModel1

AutoPIPE Vessel (Microprotol) Estimate ダイアログの BOM 内の各部品をダブ ルクリックすると、更に詳しい情報を表示させることができます。各部品に対す る単価 (unit price)、取得原価 (purchase cost) および実務下請契約費 (task sub contract cost) をカスタマイズすることができます。